



# Birlea

Suppliers of inspiration

Vendor: S000238



## ASSEMBLY INSTRUCTIONS

### LUKA 3' BED FRAME

**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR LUKA 3' BED FRAME.**

**PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**





#### **HEALTH & SAFETY:**

DO NOT jump on this bed frame.  
DO NOT use this bed frame if any parts are missing, damaged or worn.  
DO NOT use this bed frame unless all fixings are secured.  
Always use on a level, even surface.

**WARNING:** If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.

#### **CARE & MAINTENANCE:**

Periodically check all screws & fixings to ensure they are secure.  
DO NOT push the bed frame as this will damage the legs.  
Always lift the bed with two people to reposition.  
Keep any sharp objects away from the frame.

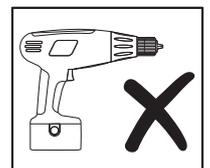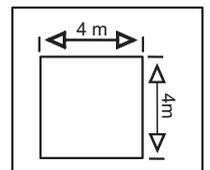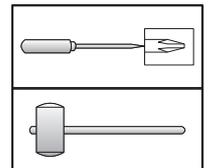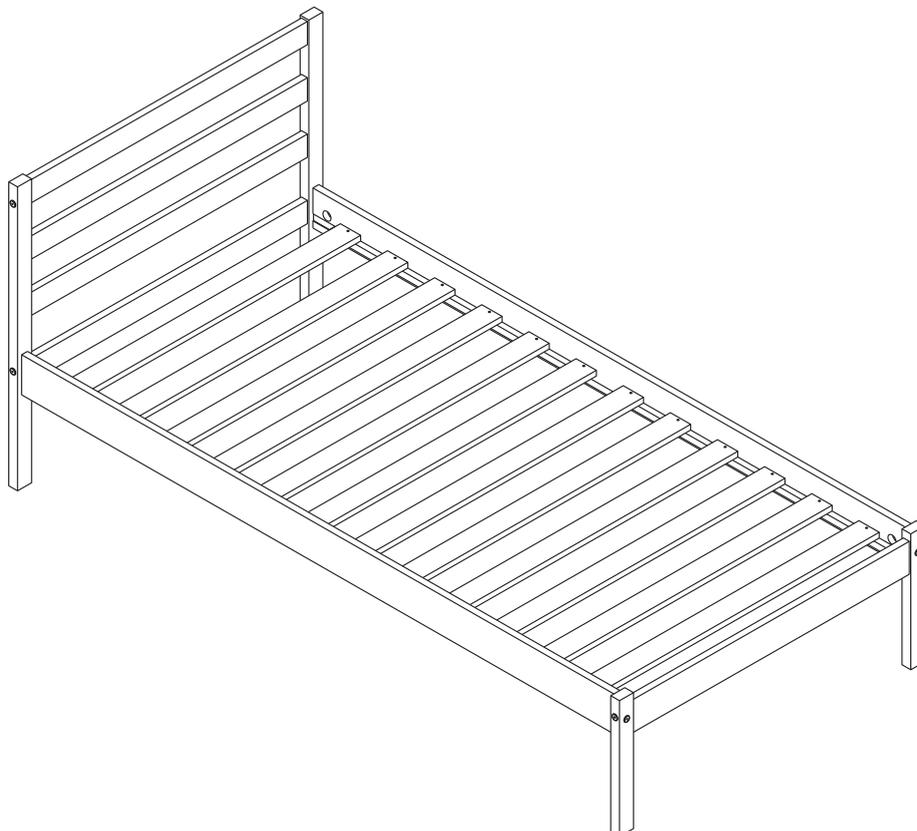



**1** Headboard post x 2  
(85 x 4.5cm)



**6** Top headboard rail x 2 (88.8 x 6.5cm)



**2** Left footboard post  
(38 x 4.5cm)



**7** Centre headboard rail x 2 (88.8 x 6.5cm)



**3** Right footboard post  
(38 x 4.5cm)




**8** Footboard panel (888.8 x 9.2cm)




**4** Slat x 12  
(91.2 x 6.5cm)





**9** Hardware Kit x 1




**5** Side rail x 2 (190 x 11.2cm)

HARDWARE LIST						
Part	Item	Qty	Part	Item	Qty	
<b>A</b>	30mm dowel 	14	<b>F</b>	Half moon nut 	4	
<b>B</b>	40mm dowel 	8	<b>G</b>	Allen key 	1	
<b>C</b>	30mm Screw 	24	<b>H</b>	Spacer 	2	
<b>D</b>	80mm Bolt 	6	<b>J</b>	Glue 	1	
<b>E</b>	70mm Bolt 	4	You will need a screwdriver and small mallet (not provided).			

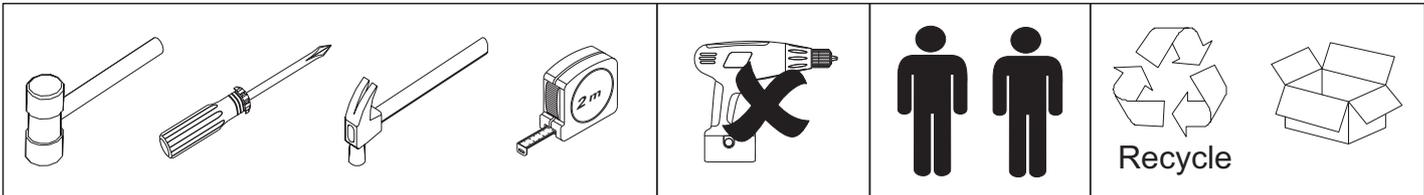


**Step 1:** Insert hardware part B to the side rails (5) using a small mallet (not provided).  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.


Vendor: S000238

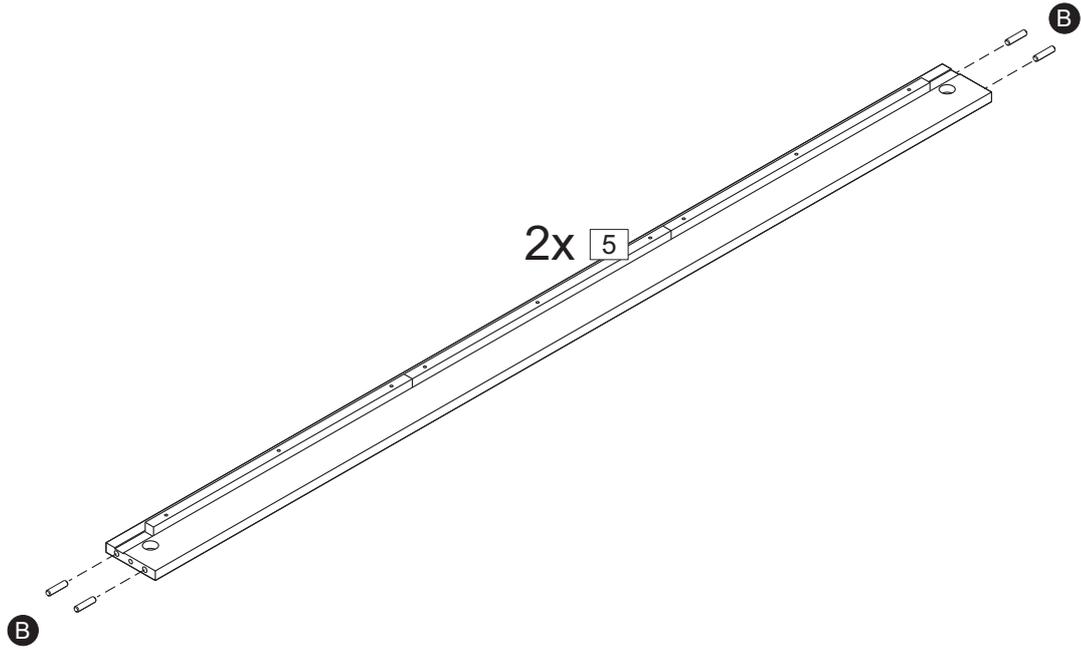

**Step 2:** Insert hardware part A to the top headend rails (6) and footend panel (8) using a small mallet (not provided).

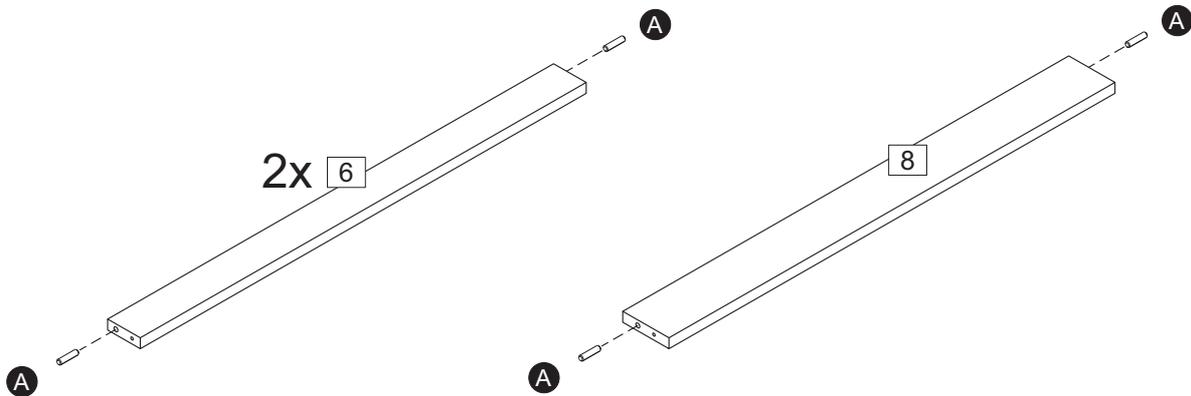


**Step 3:** Insert hardware part A and J to the centre headend rails (7) using a small mallet (not provided).

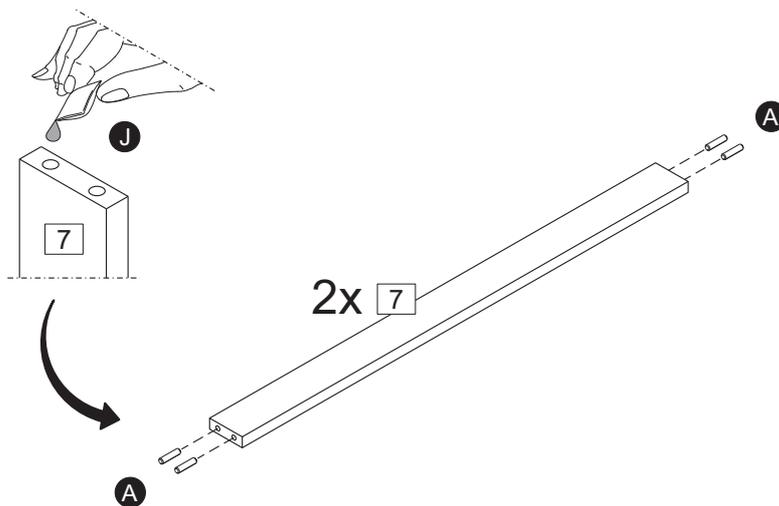


**Step 4:** Attach the headend post (1) to the centre headend rails (7) using hardware parts J. Attach the headend post (1) to the top headend rails (6) using hardware parts D and G and. **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**


Vendor: S000238

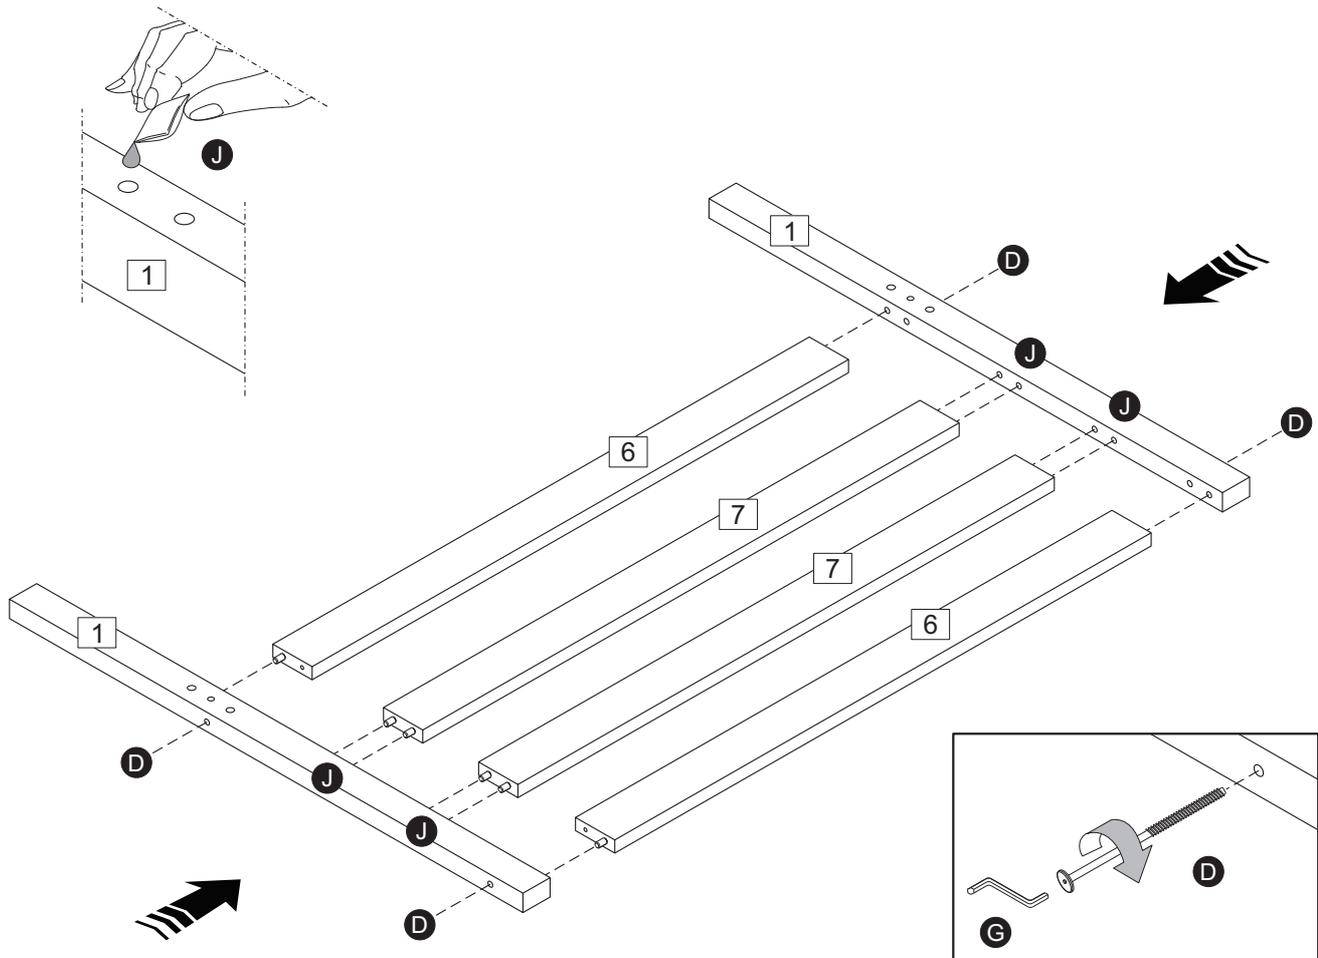




**Step 5:** Attach the left footend post (2) and right footend post (3) to the footend panel (8) using hardware parts D and G. **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

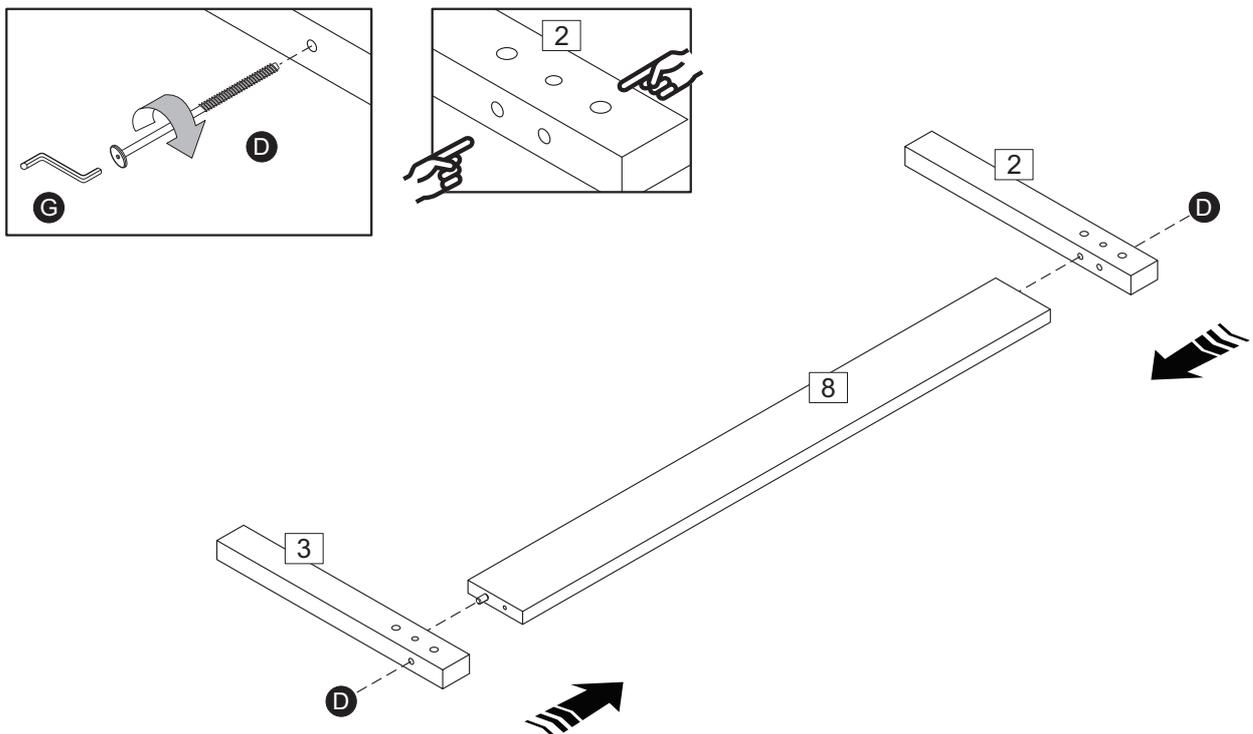

**Step 6:** Attach the side rails to the headend posts at the same time using hardware parts E, F and G. **Vendor: S000238**  
**DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

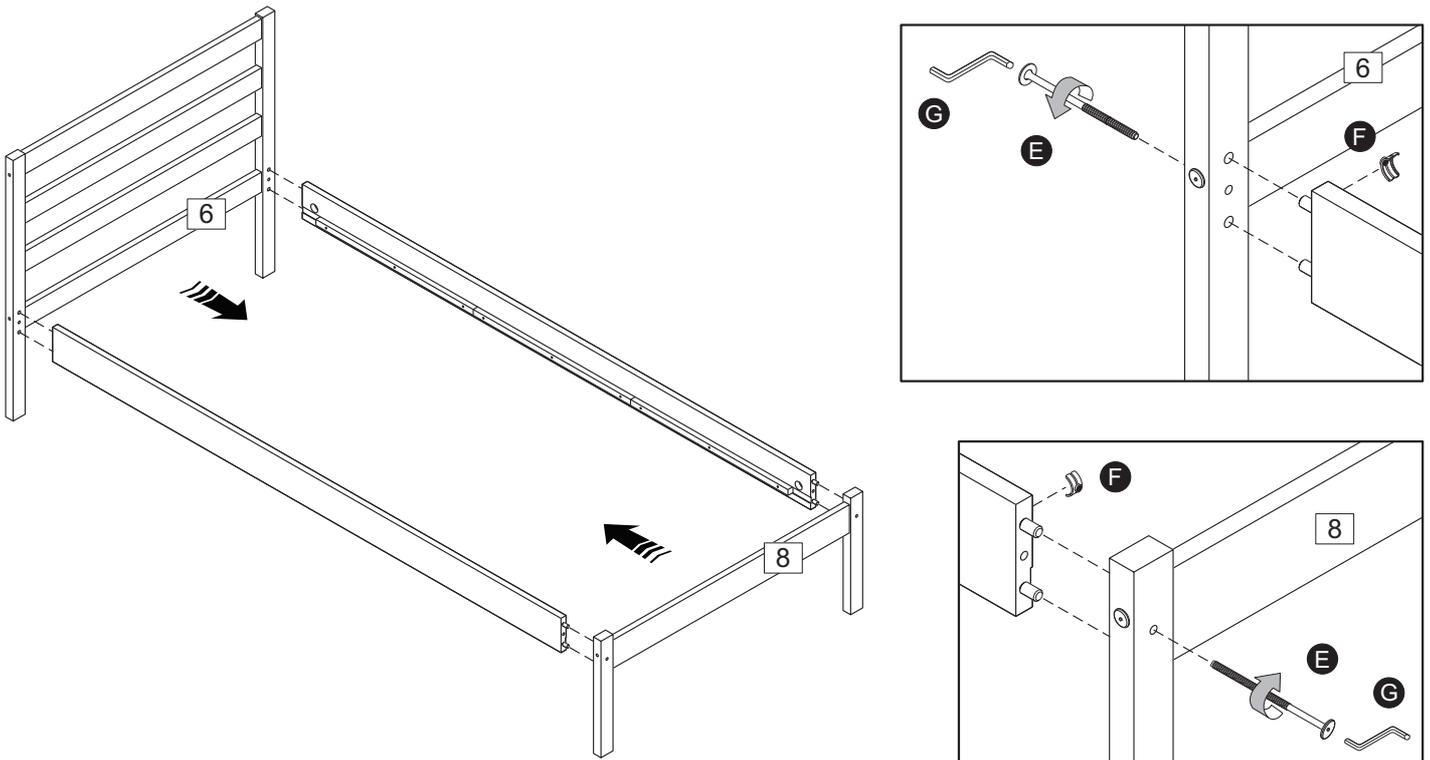

**Step 7:** Fix slats (4) to the side rails using hardware parts C and H with a screwdriver (not provided).  
 Make sure to start from the ends and work towards the middle.  
**DO NOT use any power tools as this may damage the frame and will invalidate any claim**

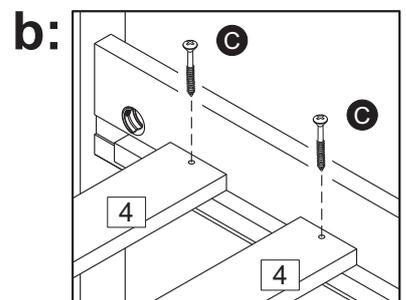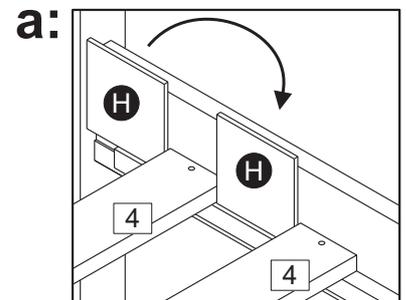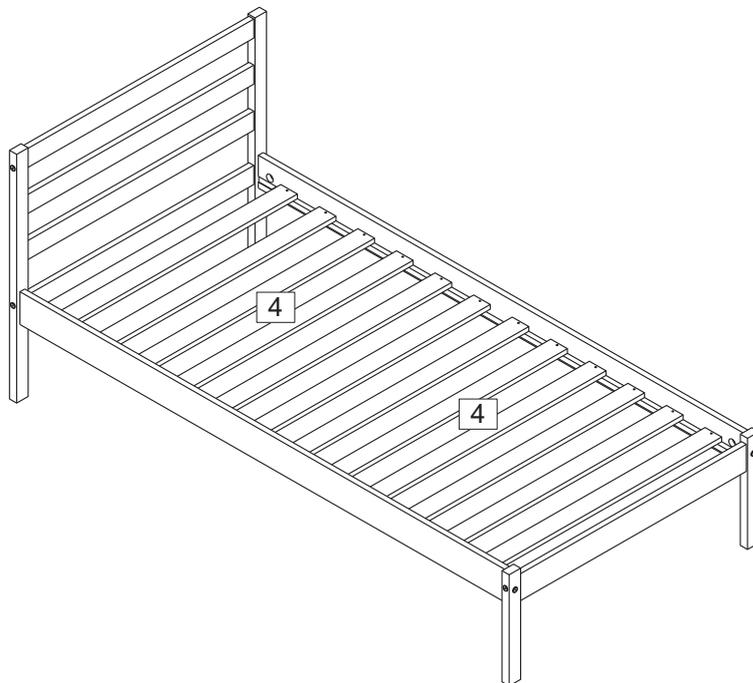

**Additional Information:**

- For complete product information, images and dimension diagrams please visit the website [www.birlea.com](http://www.birlea.com)
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to [info@birlea.com](mailto:info@birlea.com) to be shared in our #birleahome feature on Instagram.