



Birlea

Suppliers of inspiration

Vendor: S000238



ASSEMBLY INSTRUCTIONS

LISBON 3' BED FRAME

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR LISBON 3' BED FRAME.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT jump on this bed frame.

DO NOT use this bed frame if any parts are missing, damaged or worn.

DO NOT use this bed frame unless all fixings are secured.

Always use on a level, even surface.

WARNING: If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.





CARE & MAINTENANCE:

Periodically check all screws & fixings to ensure they are secure.

DO NOT push the bed frame as this will damage the legs.


Always lift the bed with two people to reposition.

Keep any sharp objects away from the frame.

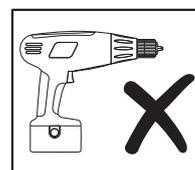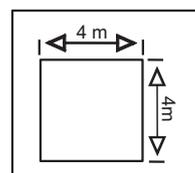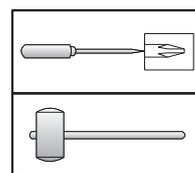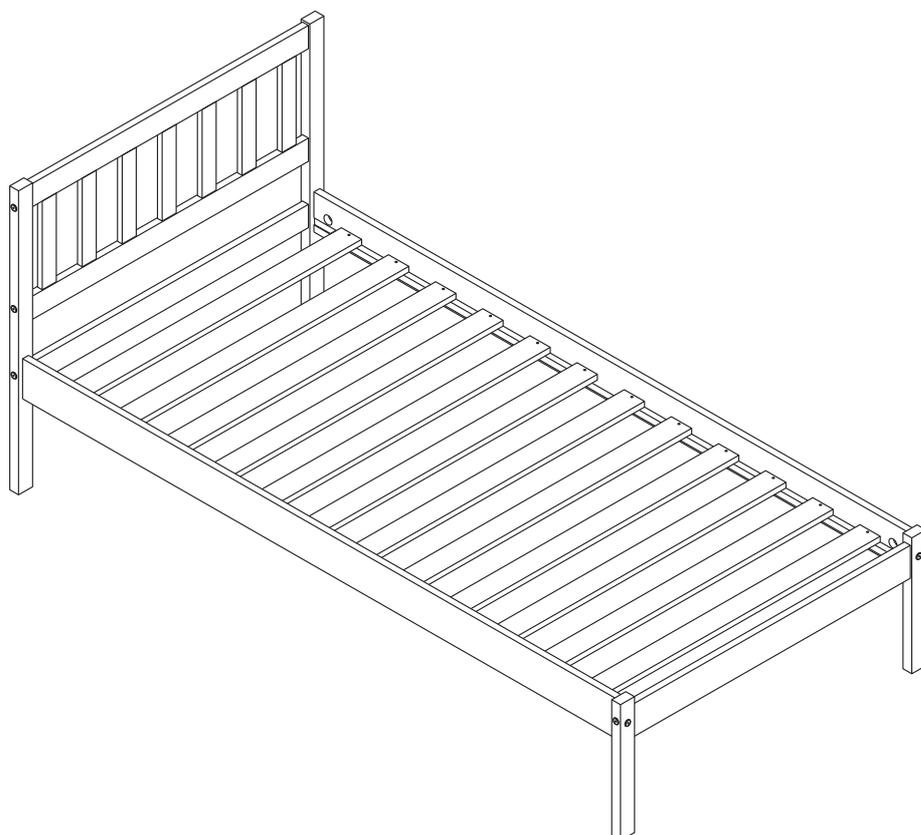




1 Headboard post x 2
(85 x 4.5cm)



6 Side rail x 2 (190 x 11.2cm)



2 Left footboard post
(38 x 4.5cm)



7 Top headboard rail x 2 (88.8 x 6.5cm)



3 Right footboard post
(38 x 4.5cm)




8 Bottom headboard rail (88.8 x 6.5cm)



4 Slat x 12
(91.2 x 6.5cm)



9 Footboard panel (888.8 x 9.2cm)






5 Headend rail x 7
(25 x 4.5cm)



10 Hardware Kit x 1


HARDWARE LIST

Part	Item	Qty	Part	Item	Qty
A	30mm dowel 	36	F	Half moon nut 	4
B	40mm dowel 	8	G	Allen key 	1
C	30mm Screw 	24	H	Spacer 	2
D	80mm Bolt 	8	J	Glue 	1
E	70mm Bolt 	4	You will need a screwdriver and small mallet (not provided).		

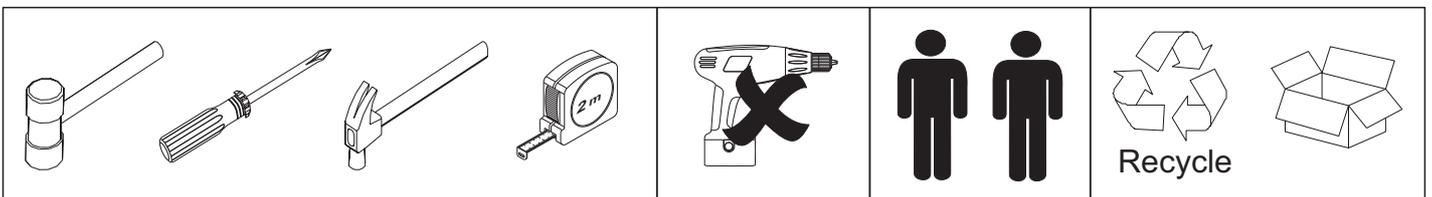


Step 1: Insert hardware part B to the side rails (6) using a small mallet (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.


Vendor: S000238

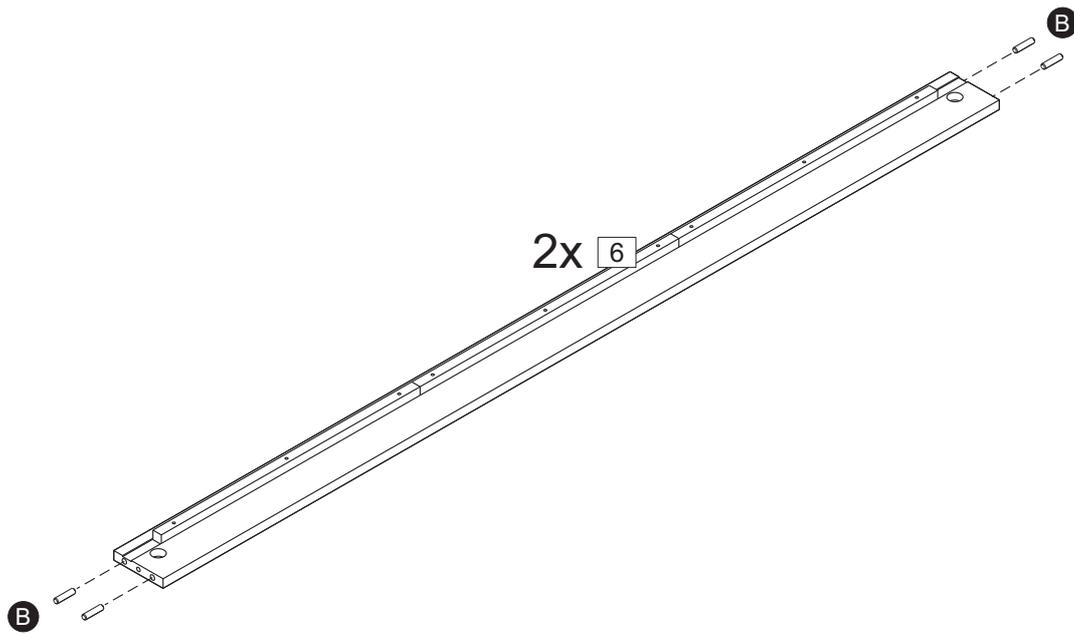

Step 2: Insert hardware part A to the top headend rails (7), bottom headend rail (8) and footend panel (9) using a small mallet (not provided).

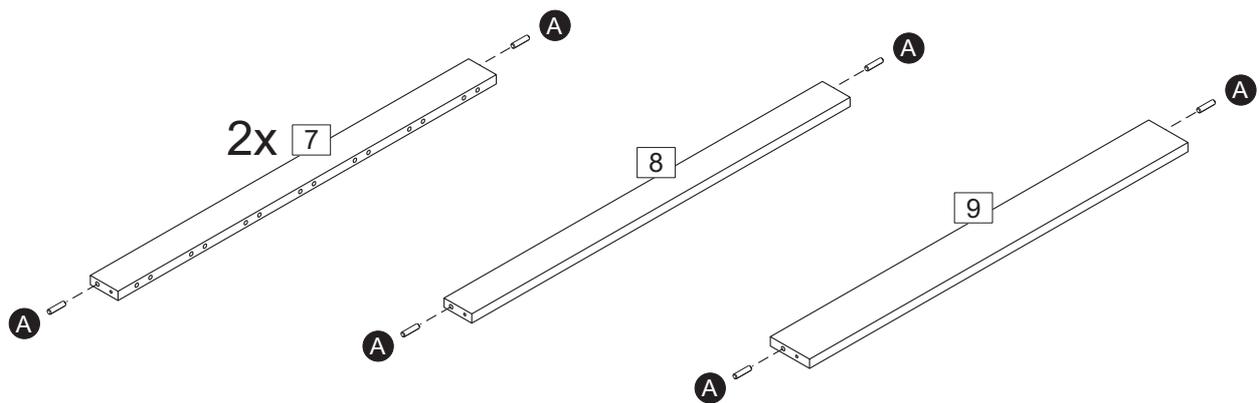


Step 3: Insert hardware part A and J to the headend rails (5). Attach the headend rails (5) and top headend rails (7).

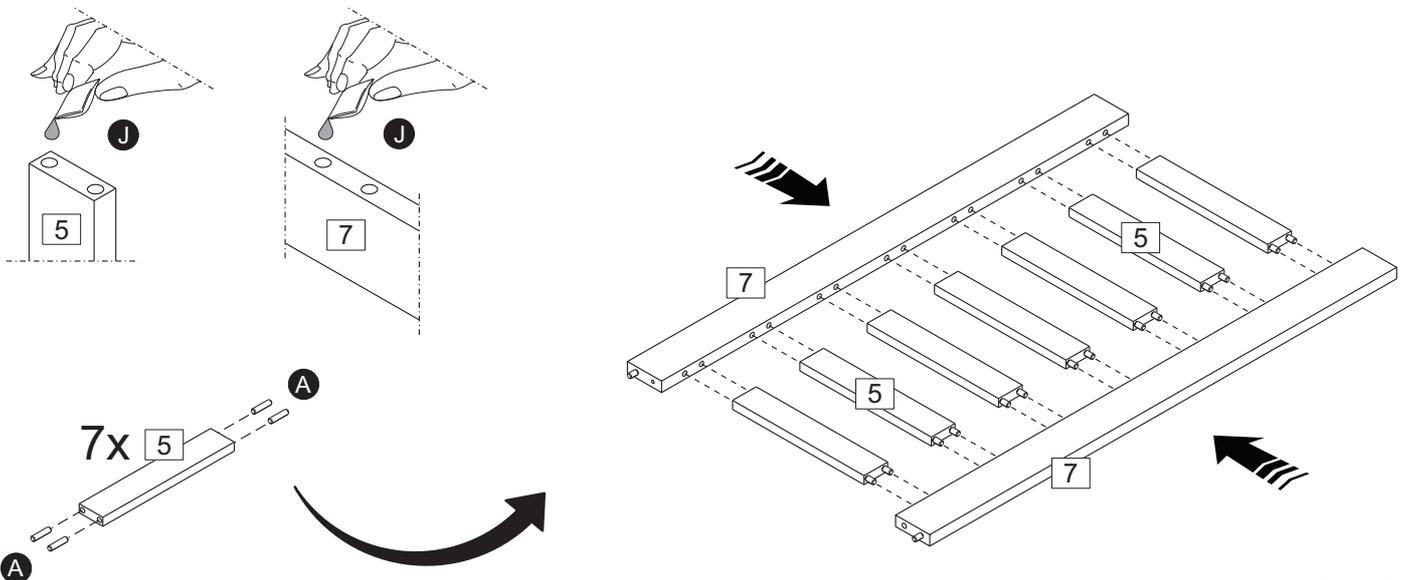


Step 4: Attach the headend post (1) to the top headend rails (7) and bottom headend rail (8) using hardware parts D and G.

Vendor: S000238


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

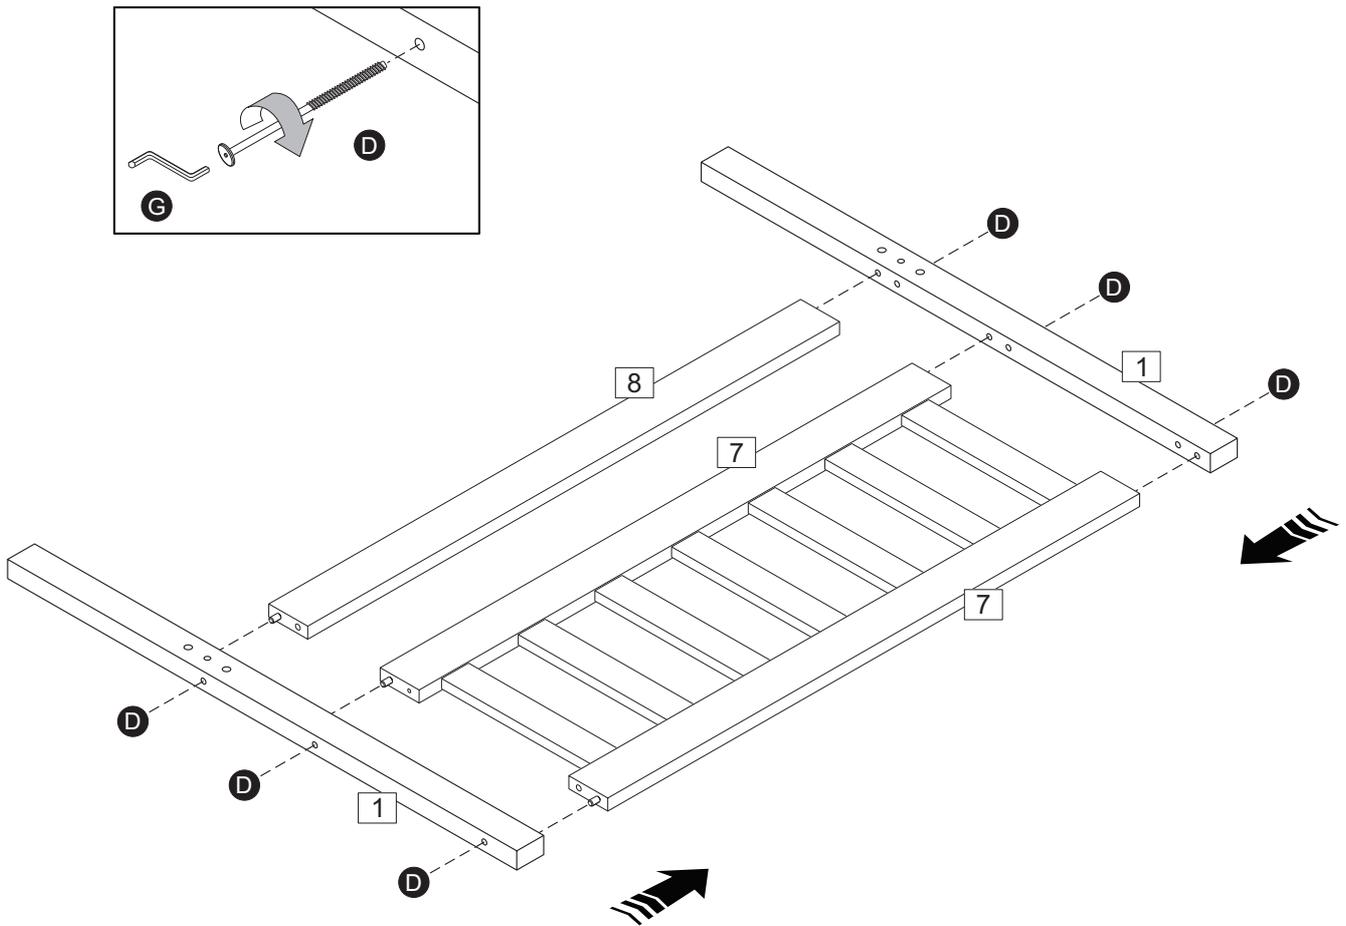


Step 5: Attach the left footend post (2) and right footend post (3) to the footend panel (9) using hardware parts D and G. **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

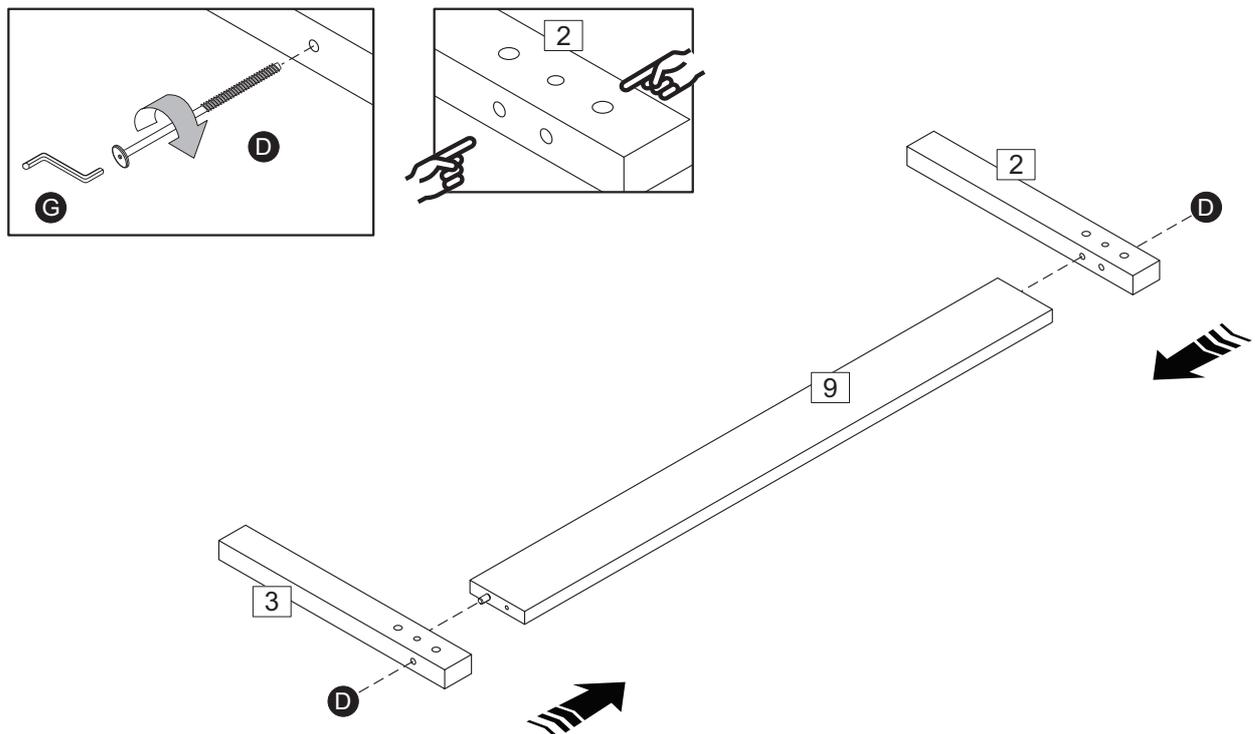

Step 6: Attach the side rails to the headend posts at the same time using hardware parts E, F and G. **Vendor:** S000238
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

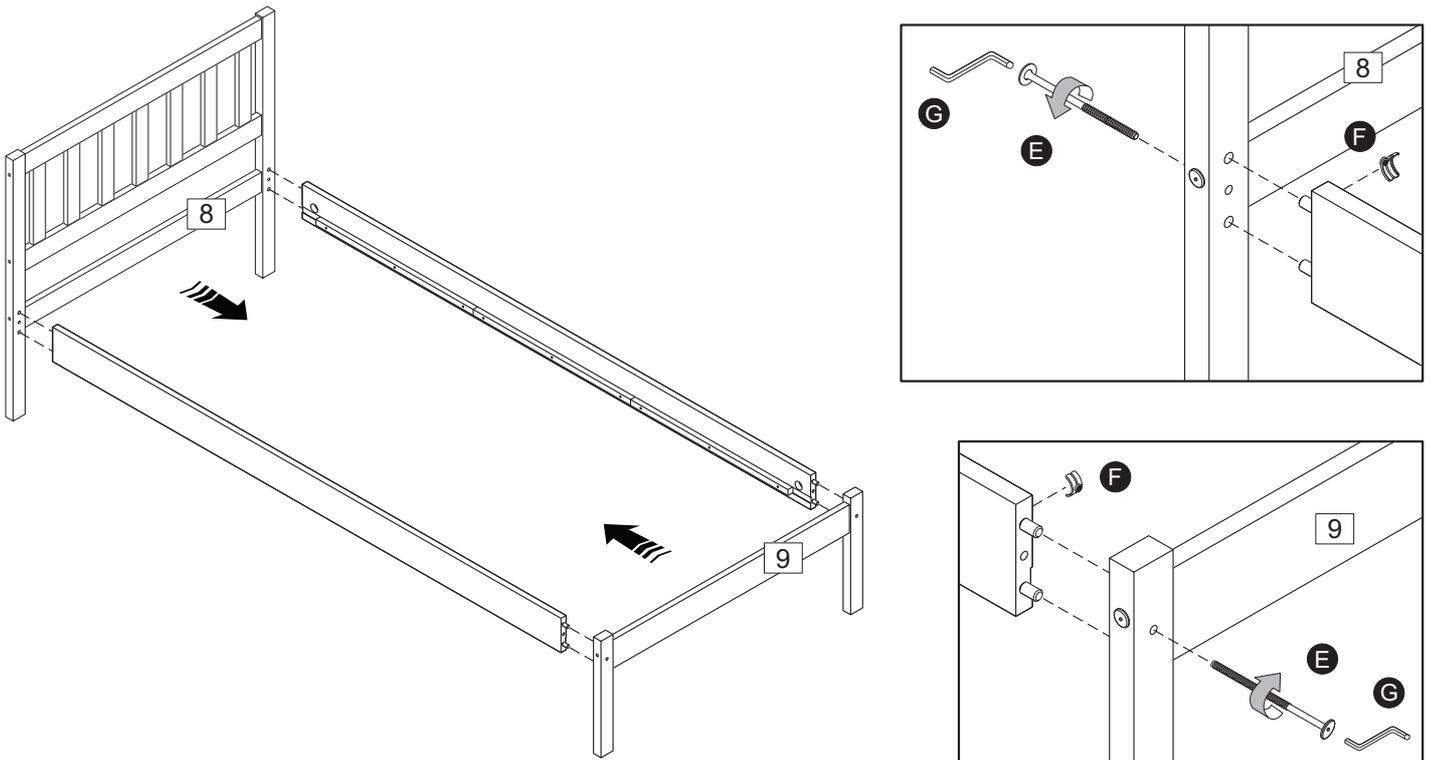

Step 7: Fix slats (4) to the side rails using hardware parts C and H with a screwdriver (not provided).
 Make sure to start from the ends and work towards the middle.
DO NOT use any power tools as this may damage the frame and will invalidate any claim

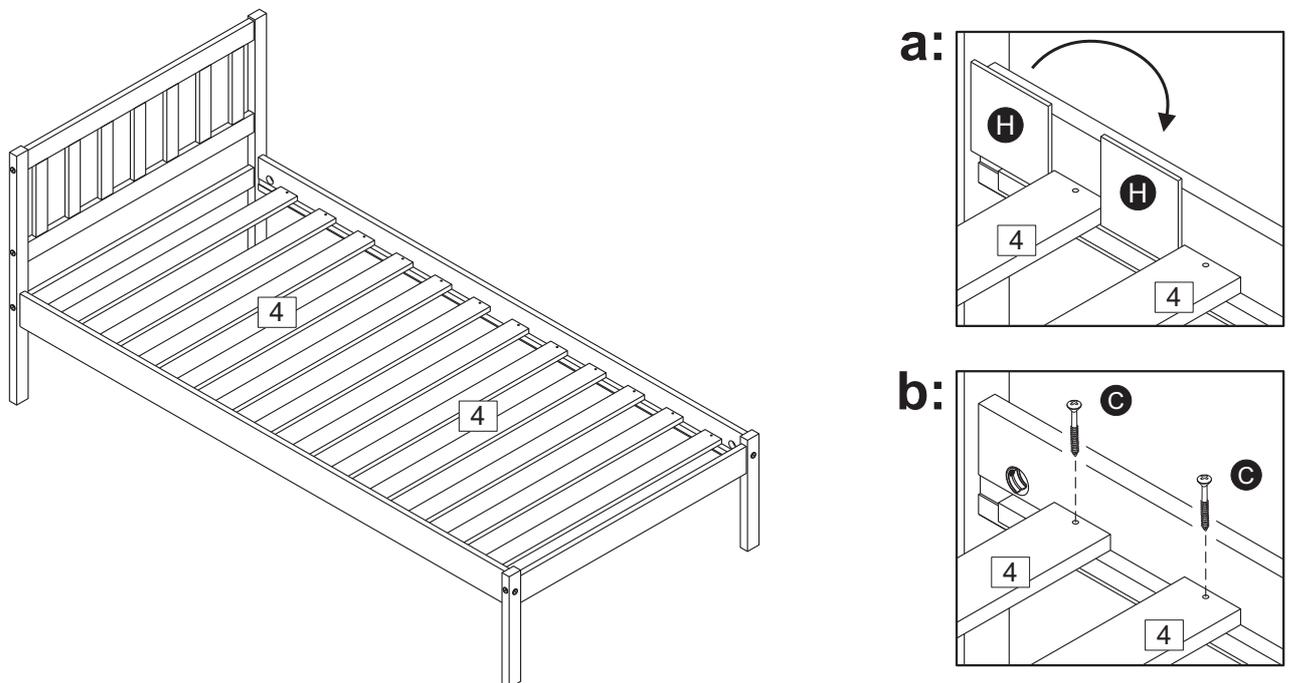

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on Instagram.